


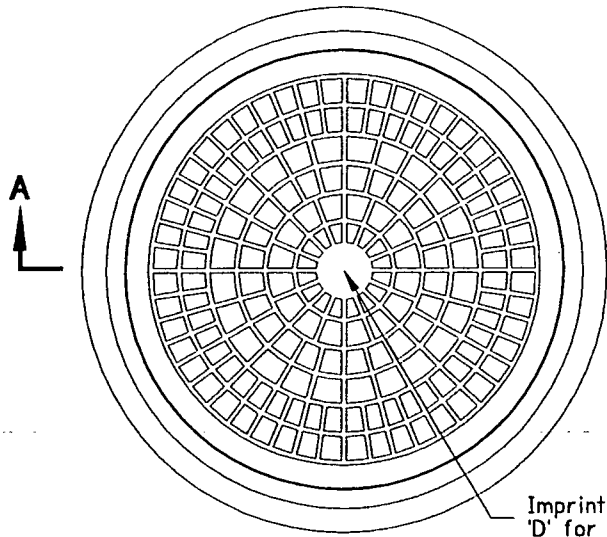


Imprinted with 'S' for sewer or
'D' for storm drains.


TOP VIEW

NOTES

1. Alhambra Foundry No. A-1495,
Apex Foundry X-117A or
approved equal.
2. Install two 3/4" x 3/4" Allen
socket set screws, 90° to
pick holes, in holes drilled and
tapped 1" in depth when required
by the Engineer.
3. Provide 24" wide, 6" high domed
concrete pad where the manhole
is located outside of paved areas.

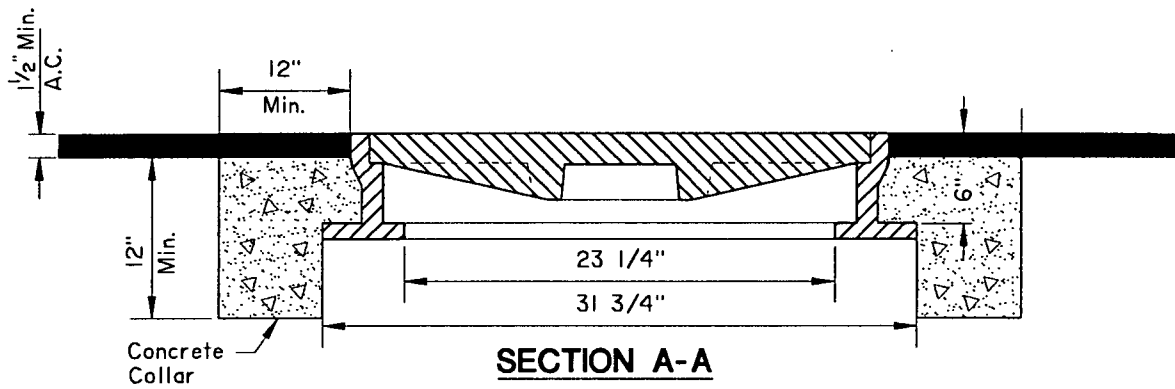

**SECTION A-A
PAVED SECTION**

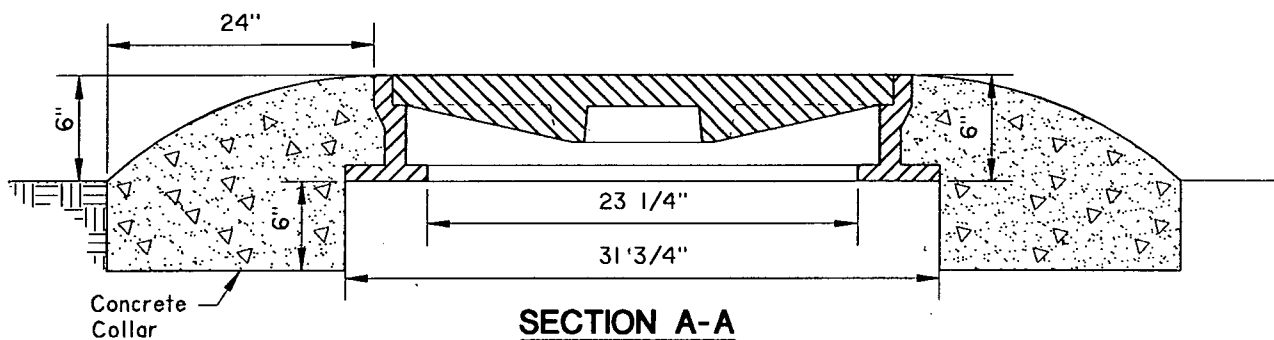

**SECTION A-A
UNPAVED SECTION**

DRAWN PLS.
DATE 8/1/95

STD. NO.
204

**CITY OF FULLERTON
ENGINEERING DEPARTMENT**

**STANDARD MANHOLE
FRAME AND COVER**

APPROVED

Robert T. Adams
DIRECTOR OF ENGINEERING

DATE

8/16/95

REVISED

DATE

